

How to use CableCreation CL0061 and CL0087


Here you need the following tools. CableCreation CL0061(Cat6a Plugs and hook connector) and CL0087(crimp tool)



Step 1: Cut the jacket of Cat6a cable



Step 2: Put the hook connector on the cable

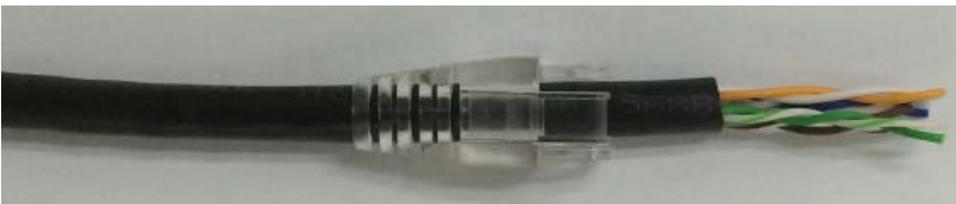

Step 3: Array the T568B wiring (You can also choose T568A if you need)

TIA/EIA-568-B.1-2001 T568A Wiring

Pin	Pair	Wire	Color
1	3	1	 white/green
2	3	2	 green
3	2	1	 white/orange
4	1	2	 blue
5	1	1	 white/blue
6	2	2	 orange
7	4	1	 white/brown
8	4	2	 brown

(refer WIKIPEDIA

https://en.wikipedia.org/wiki/Category_5_cable)

TIA/EIA-568-B.1-2001 T568B Wiring^[2]

Pin	Pair	Wire	Color
1	2	1	 white/orange
2	2	2	 orange
3	3	1	 white/green
4	1	2	 blue
5	1	1	 white/blue
6	3	2	 green
7	4	1	 white/brown
8	4	2	 brown

(refer WIKIPEDIA

https://en.wikipedia.org/wiki/Category_5_cable)

Step 4:

Use a knife to cut the cable's tip tidy as follows.




Step 5: Connect the hook connector and Cat6a plugs together



Step 6: Use the crimp tool to press the plug and the hook connector



Then the job is done.

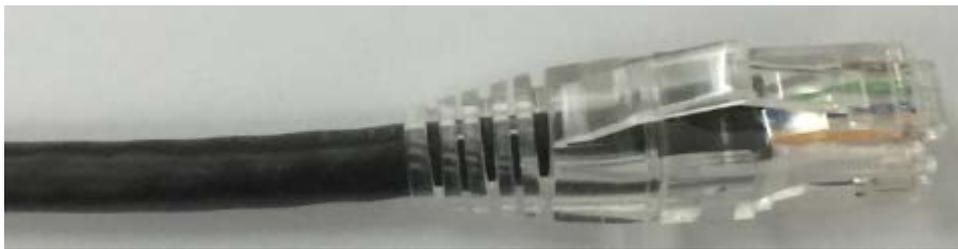

More questions, you can email to support@cablecreation.com